

## SETTING UP THE SOFT DIP ON THE MULTI VIDEO SYSTEM

1. TURN POWER ON.
2. PUSH THE TEST BUTTON INSIDE THE CABINET.
3. THE FOLLOWING SCREEN WILL APPEAR.

MOVE LEFT JOYSTICK UP/DOWN TO MOVE THE POINTER TO "SETTING UP THE SOFT DIP". PRESS "A" BUTTON TO SET.

HARDWARE TEST  
SETTING UP THE HARD DIP  
SETTING UP THE SOFT DIP  
BOOKKEEPING  
SETTING UP THE CODE NUMBER  
SETTING UP THE CALENDAR  
EXIT

THE FOLLOWING SCREEN WILL BE DISPLAYED:

CABINET SET UP  
SLOT 1 (GAME TITLE)  
SLOT 2 (GAME TITLE)  
SLOT 3 (GAME TITLE)  
SLOT 4 (GAME TITLE)  
SLOT 5 (GAME TITLE)  
SLOT 6 (GAME TITLE)

4. SELECT THE GAME TITLE YOU WANT AND PRESS "A" BUTTON TO VIEW THE SOFT DIP SETTING OF EACH INDIVIDUAL GAME.

## COMO FIJAR EL SISTEMA MULTI VIDEO "SOFT DIP"

1. CONECTAR EL CONMUTADOR DE ELECTRICIDAD.
2. APRETE EL BOTON DE PRUEBA "TEST BOTTON" DENTRO DEL CABINETE.
3. APARECERA EL LA PANTALLA LO SIGUIENTE:  
MUEVA LA PALANCA DE LA IZQUIERDA "JOYSTICK" ARRIBA Y ABAJO PARA SELECCIONARLO HASTA EL PUNTO "SOFT DIP". PRESIONE EL BUTON A PARA FIJARLO.

PRUEBA EQUIPO PESADO  
SELECCIONAR A HARD DIP  
SELECCIONAR A SOFT DIP  
CHEQUEADOR DE DATOS  
FIJADOR DE NUMERO DE CODO  
FIJADOR DE CALENDARIO  
SALIDA O CIERRE

LO SIGUIENTE APARECERA EN LA PANTALLA.

SELECCIONAR EL CABINETE  
RANURA 1 (TITULO DEL JUEGO)  
RANURA 2 (TITULO DEL JUEGO)  
RANURA 3 (TITULO DEL JUEGO)  
RANURA 4 (TITULO DEL JUEGO)  
RANURA 5 (TITULO DEL JUEGO)  
RANURA 6 (TITULO DEL JUEGO)

4. SELECCIONE EL TITULO DEL JUEGO Y PRESIONE EL BOTON "A" PARA CHEQUEAR LA FIJACION DE "SOFT DIP" EN CADA JUEGO INDIVIDUAL.

## ART OF FIGHTING

ROUND TIME	60
LANGUAGE	ENGLISH
CONTINUE	WITH
BUY-IN	WITH
DIFFICULTY	LEVEL 3
1 STAGE	3 ROUND
DEMO SOUND	ON
CREDIT	WITH
HOW TO PLAY	ON

1 ROUND TIME	SETTING TIME FOR 1 ROUND
CONTROLS: USE JOYSTICK TO MOVE ARROW. PRESS "A" BUTTON TO INCREASE TIME & "B" BUTTON TO DECREASE.	
NORMAL SETTING = 60	
2 LANGUAGE	SETTING FOR LANGUAGE
CONTROLS: USE JOYSTICK TO MOVE ARROW. CHANGE MODE WITH "A" OR "B" BUTTON.	
NORMAL SETTING = ENGLISH	
3 CONTINUE	WITH OR WITHOUT CONTINUE
CONTROLS: USE JOYSTICK TO MOVE ARROW. CHANGE MODE WITH "A" OR "B" BUTTON.	
NORMAL SETTING = WITH	
4 BUY-IN	WITH OR WITHOUT BUY-IN
CONTROLS: USE JOYSTICK TO MOVE ARROW. CHANGE MODE WITH "A" OR "B" BUTTON.	
NORMAL SETTING = WITH	
5 DIFFICULTY	DIFFICULTY SETTING
CONTROLS: USE JOYSTICK TO MOVE ARROW. CHANGE MODE WITH "A" OR "B" BUTTON.	
NORMAL SETTING = LEVEL 3	
6 1 STAGE	SETTING NUMBER OF ROUNDS FOR 1 STAGE
CONTROLS: USE JOYSTICK TO MOVE ARROW. CHANGE MODE WITH "A" OR "B" BUTTON.	
NORMAL SETTING = 3 ROUND	
7 DEMO SOUND	WITH OR WITHOUT SOUND
CONTROLS: USE JOYSTICK TO MOVE ARROW. CHANGE MODE WITH "A" OR "B" BUTTON.	
NORMAL SETTING = ON	
8 CREDIT	WITH OR WITHOUT CREDIT DISPLAY
CONTROLS: USE JOYSTICK TO MOVE ARROW. CHANGE MODE WITH "A" OR "B" BUTTON.	
NORMAL SETTING = WITH	
9 HOW TO PLAY	WITH OR WITHOUT HOW TO PLAY SCREEN
CONTROLS: USE JOYSTICK TO MOVE ARROW. CHANGE MODE WITH "A" OR "B" BUTTON.	
NORMAL SETTING = ON	