

FUNCTION	SWITCH BANK 2						SWITCH BANK 3					
	1	2	3	4	5	6	1	2	3	4	5	6
UPRIGHT											ON	
TABLE TOP											OFF	
NO NAME REG							ON					
NAME REG							OFF					
10 CHARACTERS								ON				
3 CHARACTERS								OFF				
1 COIN			OFF	OFF								
2 PLAY			ON	OFF								
3 PLAY			OFF	ON								
4 PLAY			ON	ON								
5 PLAY												
1 PLAY					OFF	OFF						
4 COINS					ON	OFF						
3 COINS					OFF	ON						
2 COINS					ON	ON						
1 COIN												
BONUS AT 10,000									OFF	OFF		
20,000									OFF	ON		
30/40									ON	OFF		
40/80									ON	ON		
3 ROCKETS/LIVES		ON										
5 ROCKETS/LIVES		OFF										
COLOUR OPT. 1.												ON
COLOUR OPT. 2.												OFF
METER PULSES. 2	ON											
METER OPT. 5	OFF											


SCREEN GRADING
SWITCH BANK ONE

S2	RED	ON/OFF
S3	GREEN	ON/OFF
S4	BLUE	ON/OFF


A FUNCTION SELECTED IS NOT CHANGED BY THOSE SWITCHES LEFT BLANK IN THE TABLE.

GAME CONTROL SWITCHES

1/A 3/C 5/E 6/F 7/G 8/H

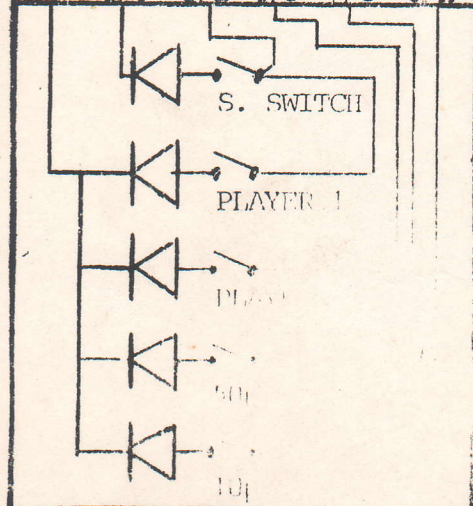

UPRIGHT AND PLAYER ONE TABLE TOP BUTTON BANK

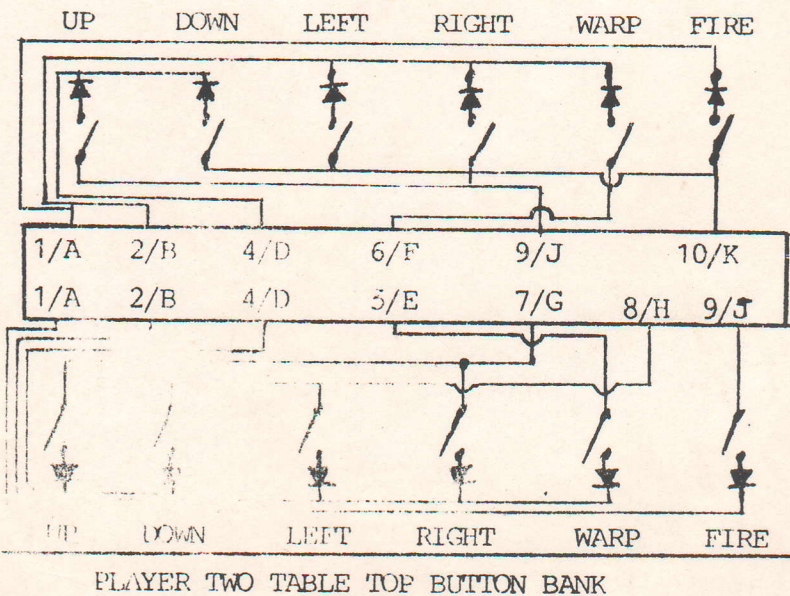

PLAYER TWO TABLE TOP BUTTON BANK

SWITCH BANK 4 Switches 4.6.8. "ON"