

Please note the following Option Switch Settings for the SAC-1 game **HAT TRICK™** production release version. These settings reflect the state of the game as of November 12, 1984. The option switches are located at G1 and H1 of the SAC-1 board, at the top-far end of the board as it sits in the SAC-1 Game Cabinet facing from the front.

### HAT TRICK™ Option Switch Settings


#### G1

1	2	3	4	5	6	7	8	
OFF	OFF	OFF	XX	XX	XX	XX		Time game - 3:00
ON	OFF	OFF	XX	XX	XX	XX		Time game - 2:45
OFF	ON	OFF	XX	XX	XX	XX		Time game - 2:30
ON	ON	OFF	XX	XX	XX	XX		Time game - 2:15
*OFF	OFF	ON	XX	XX	XX	XX		Time game - 2:00
ON	OFF	ON	XX	XX	XX	XX		Time game - 1:45
OFF	ON	ON	XX	XX	XX	XX		Time game - 1:30
ON	ON	ON	XX	XX	XX	XX		Time game - 1:15
			XX	XX	XX	XX	*OFF	No Attract sounds
			XX	XX	XX	XX	ON	Attract Sounds

#### H1

1	2	3	4	5	6	7	8	
OFF	OFF		XX	XX	XX	XX	XX	1 COIN/1 PLAY
OFF	ON		XX	XX	XX	XX	XX	1 COIN/2 PLAYS
ON	OFF		XX	XX	XX	XX	XX	2 COINS/1 PLAY
ON	ON		XX	XX	XX	XX	XX	FREE PLAY
		*OFF	XX	XX	XX	XX	XX	1 or 2 Plyr/Cred
		ON	XX	XX	XX	XX	XX	1 Player/Credit

\* = recommended settings

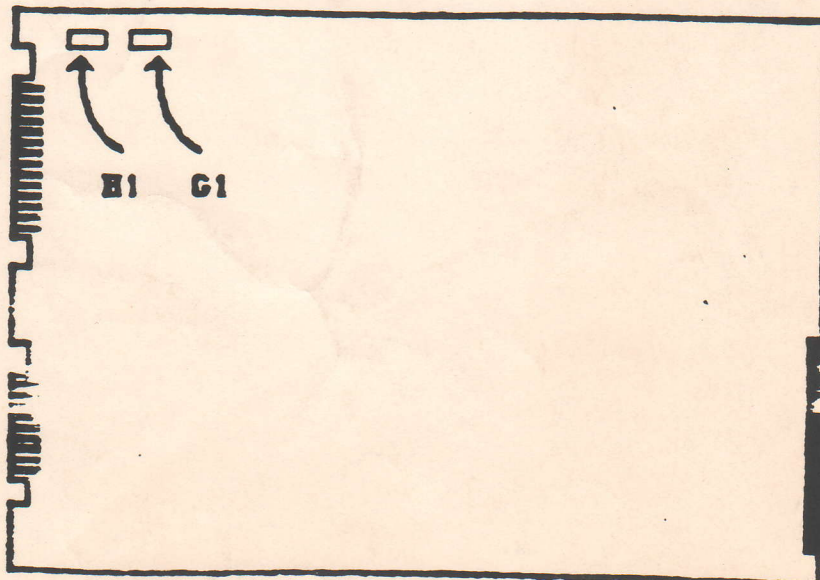

REL. FOR PRODU...  
JJ 12/3/84

M051-00B94-A007