

SAC 1 GAME CONVERSION INSTRUCTIONS

The following instructions will cover the conversion of most SAC 1 games. Additional instructions will be provided, when needed, for special conversions. Each SAC 1 conversion kit should contain the following material:

- 1 control panel insert
- 1 attract (header) art
- 1 game cartridge

If this kit does not contain all of this material or if the material is not for the correct game, contact your distributor. If more than this material is included in the kit, additional conversion instructions should be provided on a separate sheet.

Simplified Instructions

1. Power off SAC 1 unit.
2. Change attract (header) art.
3. Change control panel insert.
4. Change game cartridge.
5. Check Option Switch Settings.
6. Power on SAC 1 unit.
7. Play game.

BE SURE TO SAVE GAME CARTRIDGE, CONTROL PANEL INSERT, AND ATTRACT (HEADER) ART FOR REUSE.

Detailed instructions are to be found on the other side of this sheet.

To Change Attract (Header) Art, Detailed Instructions:

1. Remove bolts holding in Attract Retainer located at top front of cabinet. Remove Attract Retainer.
2. Slide Attract Glass up and out of cabinet.
3. Remove old Attract Art and replace with new Attract Art.
4. Slide Attract Glass containing new art back into cabinet.
5. Replace and secure Attract Retainer.
6. Clean front of Attract Glass.

To Change Control Panel Insert, Detailed Instructions:

1. Power off SAC 1 unit using switch located at bottom rear of cabinet next to power cord.
2. Unlock and open Coin Mech (top) door at front of cabinet.
3. Reach through Coin Mech door and grasp latch bar inside large front door.
4. Unlatch large front door by lifting up on bar and pushing out.
5. Disconnect Control Panel Harness from Main Harness by pulling plugs apart.
6. Release the two Control Panel Latches located inside cabinet above the large front door and Coin Mech door respectively.
7. Lift Control Panel up, slide to right, and pull down to remove. Carefully pull Control Panel Harness wiring out of opening at rear of Control Panel Tray.
8. Remove bolts from Control Panel Insert and remove Control Panel Insert from Control Panel.
9. Place new Control Panel Insert in Control Panel and secure with bolts.
10. Replace Control Panel, carefully feeding Control Panel wiring through opening at rear of Control Panel Tray.
11. Latch Control Panel into place.
12. Plug Control Panel Harness into Main Harness.
13. Close and latch large front door.
14. Close and lock Coin Mech door.
15. Power on SAC 1 unit using switch at rear of cabinet.
16. Play game to check if all switches and controls are operating correctly.

To Change Game Cartridge, Detailed Instructions:

1. Power off SAC 1 unit using switch at rear of cabinet.
2. Unlock Coin Mech door and reach through to unlatch large front door from inside cabinet.
3. Find Game Cartridge On/Off Switch located at bottom front right of Electronic Chassis just inside large front door (this switch may be used to power unit on and off in place of switch at rear of cabinet).
4. Turn Game Cartridge On/Off Switch off to permit Game Cartridge to slide out of Electronic Chassis.
5. Slide old Game Cartridge out of chassis.
6. Slide new Game Cartridge between runners to plug into the Main PC Board. Be sure Game Cartridge is securely plugged in. ROMs on the Game Cartridge should be facing to the left as you look into the cabinet.
7. Turn Game Cartridge On/Off Switch back on (this also locks cartridge into place).
8. Check game option switch settings.
9. Close and latch large front door.
10. Close and lock Coin Mech door.
11. Power on SAC 1 unit using switch at rear of cabinet.
12. Play game to test if unit is working properly.