

MORTAL KOMBAT 3 ULTIMATE ROM UPGRADE KIT

!! Use This Kit To Enhance Game Play And Increase Earnings !!

ROM LIST

These chips are static sensitive. Prepare anti-static work area before removing them from the protective anti-static shipping box.

Part Number	Designation
A-5343-40063-9	U2
A-5343-40063-10	U54
A-5343-40063-11	U63
A-20314	U64
5341-14635-1	U121
5341-14635-2	U120
5341-14635-3	U119
5341-14635-4	U118
5341-14635-5	U113
5341-14635-6	U112
5341-14635-7	U111
5341-14635-8	U110


INSTRUCTIONS

1. Turn off and unplug the game. Remove the rear door.
2. Unplug the following chips, shown in the gray shading in Figure #1, from the CPU board and set them aside.

U2	U114	U118
U54	U115	U119
U63	U116	U120
U64	U117	U121

3. Carefully, remove the upgrade chips from their protective anti-static bag. Use Figure #2 and plug each one of the following chips into the proper socket. *Be sure to match the notch on the chip with the notch outlined in white on the board.*

U2	U110	U118
U54	U111	U119
U63	U112	U120
U64	U113	U121

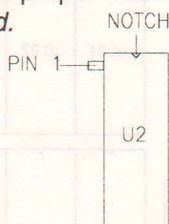

4. Remove the hex-head screws from the top of the black plastic marquee retaining strip, and set them aside. Remove the strip from the top of the cabinet. Lift the marquee out and replace it with the new one included in this kit. Replace the marquee retaining strip and fasten into place with the hex-head screws.
5. Replace the rear door. Plug in and turn on the game. Perform power On self-test to ensure the board is operating properly.
6. Pack the old chips in the anti-static box. Tape the box shut and return it to the distributor.

MORTAL KOMBAT 3 CPU BOARD

Figure #1 Before Update. (Remove these chips.)

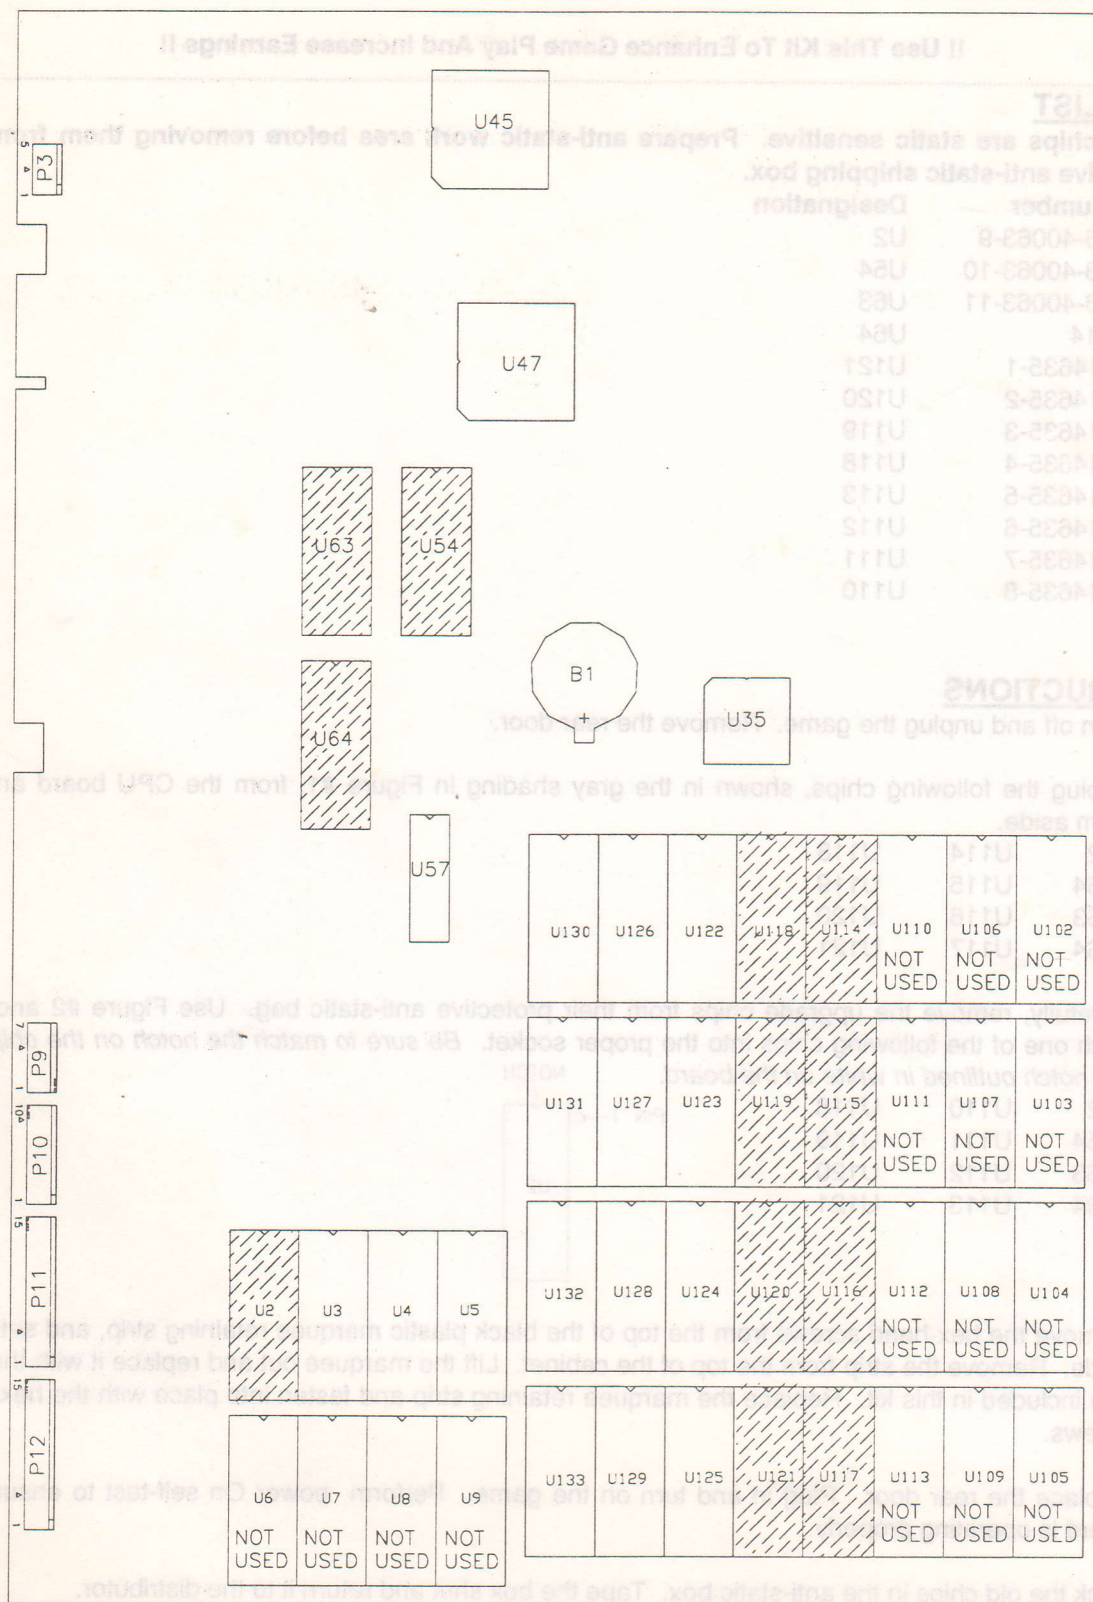


Figure #2 After Update. (Add these chips.)

