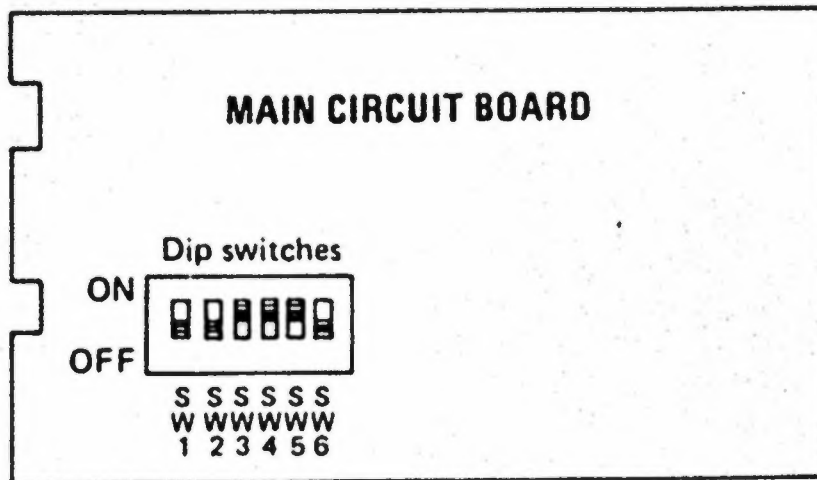


**C. POSITIONS OF DIP SWITCHES AND VOLUME CONTROLLER KNOBS**



**Fig. 3-1** Positions of Dip Switches

**a) Setting the option (dip switches)**

COSMIC GUERILLA is designed to have various operations and options set by the ON-OFF combinations of the dip switches. When starting a game, choose any desired game option and set the dip switches accordingly.

**1. Setting the number of laser guns according to score:**  
(Dip switches SW1, 2)

Score	SW1	SW2
2000	OFF	OFF
1500	ON	OFF
1000	OFF	ON
0	ON	ON

(Set at 2,000 points when shipped)

**2. Setting the game charge:**

Credit	SW3
1 coin 1 play	ON
1 coin 2 plays	OFF

**3. Setting the number of laser guns:**

Number of laser guns	SW4
3	ON
5	OFF

(Set at 3 laser guns when shipped)