



PCG DRAWER SYSTEM

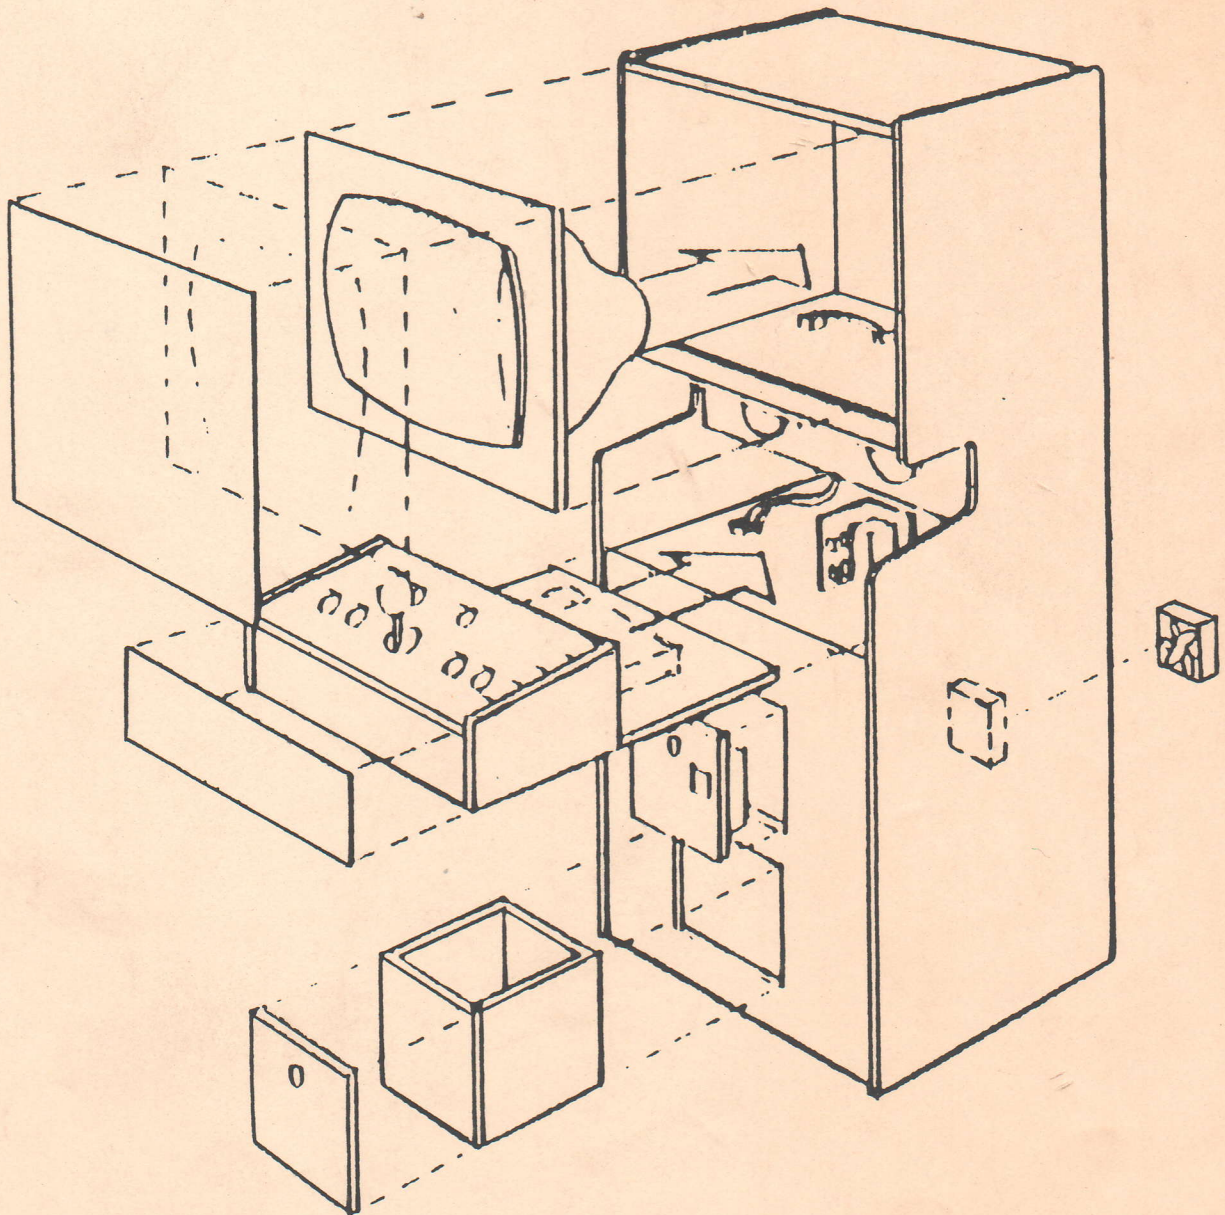

© Copyright 1984
By PACIFIC COAST GAMES, INC.

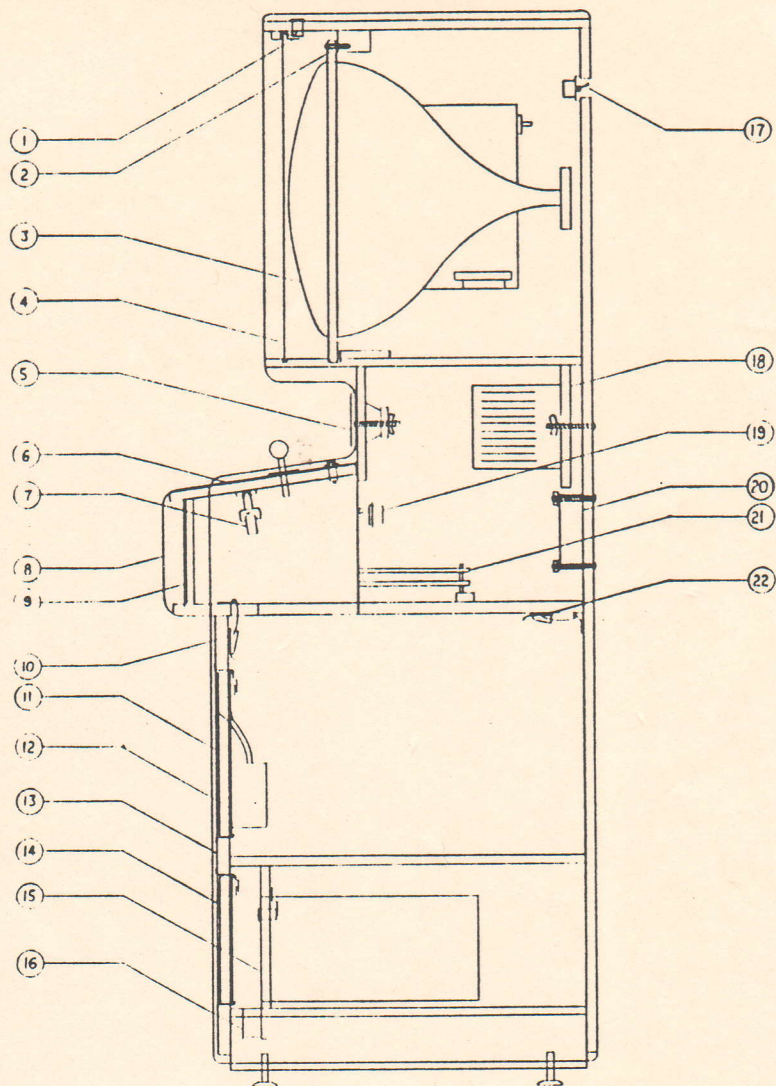

1. Monitor plexiglass lock
2. Monitor hold down screws(2)
3. 20" color monitor
4. Monitor plexiglass
5. Speaker panel
6. Control panel
7. Control panel security latch(2)
8. Game drawer
9. Game marquee
10. Game drawer security latch(front)
11. Coin door
12. Coin mechanism
13. Front panel
14. Cash box door
15. Cash box
16. Coin meter
17. On/off Switch
18. Power supply module
19. Safety switch
20. Fan
21. Game P.C.B.
22. Game drawer security latch(rear)

POWER SUPPLY

<u>MOLEX PLUG 12 PINS (.093)</u>	<u>COLOR CODE</u>
1-110 Volt AC Line	Black
2-110 Volt AC Line	Purple
3-Chassis(GND)	Light Green
4-110 AC to Monitor	White
5-110 AC to Monitor	Yellow
6-+12 Volts DC	Red
7-GND (DC)	Brown
8-+5 Volts DC	Orange
9--5 Volts Dc	Pink
10-110 AC to Coin Transformer	Grey
11-110 AC to coin Transformer	Blue
12--12	Brown

MONITOR

<u>MOLEX 1 PIN (.093)</u>	<u>COLOR CODE</u>
1- Chassis (GND)	Light Green
<u>MOLEX PLUG 2 PINS (.093)</u>	<u>COLOR CODE</u>
1-110 Volts AC Line	White
2-110 Volts AC Line	Yellow
<u>MOLEX PLUG 9 PINS (.062)</u>	<u>COLOR CODE</u>
1-TV Red	Red
2-TV Green	Green
3-TV Blue	Blue
4-GND	Black
5-Relay	White
6-Relay	Purple
7-(H)Sync	Grey
8-(V) Sync	Pink
9-Spare	----

COIN MECH.

MOLEX PLUG 9 PINS (.093)

1-GND	Brown
2-Right Credit	White
3-Spare	Purple
4-Chassis (GND)	Light Green
5-Spare	----
6-12 Volts	Black
7-110 Volts AC	Grey
8-110 Volts AC	Blue
9-Spare	----

SPEAKER

MOLEX PLUG 4 PINS (.093)

1-(+) Speaker	Yellow
2-(-) Speaker	Orange
3-Chassis(GND)	Green
4-Spare	----

DRAWER

MOLEX PLUG 12 PIN (.062) FEMALE

1- Red	Red
2-Green	Green
3-Blue	Blue
4-GND	Black
5-Sync(H)	Pink
6-Sync(V)	Grey
7-GND(Coin)	Brown
8-Coin1	Purple
9-Coin2	White
10-SPK(+)	Yellow
11-SPK(-)	Orange
12-12 V	Dark Brown

MOLEX PLUG 6 PIN (.062) MALE

1-+5V	Red
2-Spare	N/C
3-Spare	N/C
4-Spare	N/C
5-Output(Coin Meters)	Black

CONTINUED (DRAWER)

MOLEX PLUG 6 PIN (.093)

COLOR CODE

1-+12V

Red

2--5V

Pink

3-+5V

Orange

4-GND

Brown

5-Relay GND Jumper from #4

White

6-Relay(+12V) Jumper From # 1

Purple

---Use only to invert monitor

2.9.006.



10


2000 年 1 月 1 日 至 2000 年 12 月 31 日

CONSTITUTIONAL AND POLITICAL SCIENCE

THE UNIVERSITY OF CHICAGO PRESS

THE

RELAY BOARD

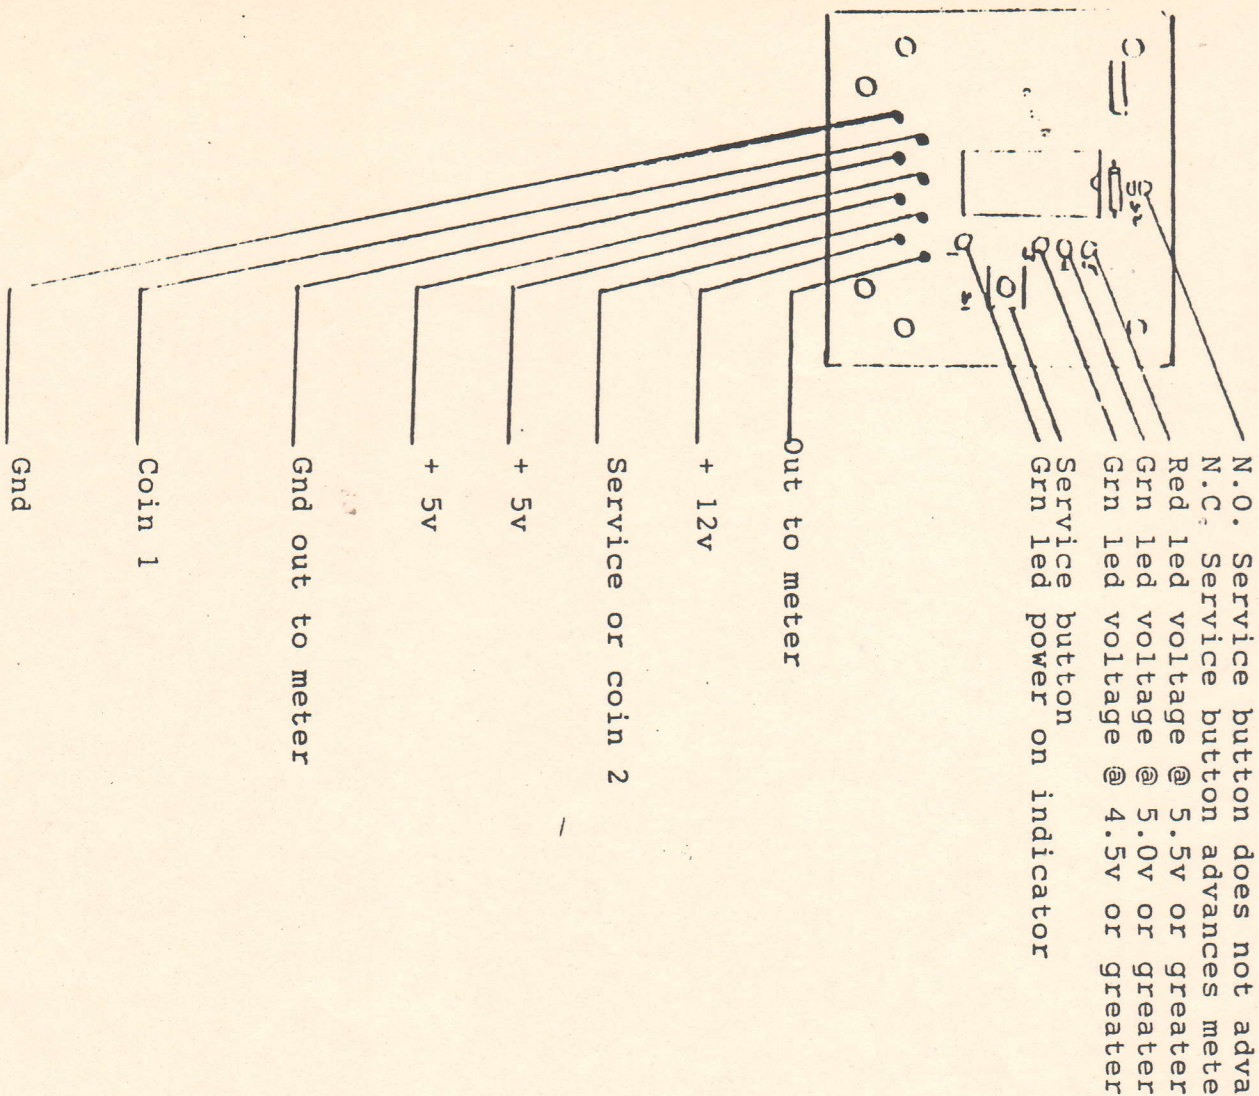

Proper operation is indicated when all 3 grn led are on and the red led is off.

- 1) If led 1 is off check main fuse and 12v supply line.
- 2) If led 3 is off check 5 volt supply line and fuse. Turn up voltage with power supply voltage adjuster.
- 3) If led 4 is off turn up voltage with power supply voltage adjuster.
- 4) If led 5 is on turn down voltage with the power supply voltage adjuster.



+5 VOLT SUPPLEMENT SUPPLY HARNESS

Due to repeated problems with the modular power supply in our solo cabinet, we have added a harness directly from the positive five volts on the power supply to the game drawer. This harness bypasses the plug between the power supply and the main harness. The harness consists of one orange wire and one black wire with a male and female plug in the middle. One end of the harness has pins crimped on the end, which plugs in the edge connector on the game P.C.B.. The other end of the harness should be soldered directly to the power supply. The orange wire is the five volt and should be soldered to the fuse holder on the power supply. The black wire is the ground and should be soldered directly to the ground terminal on the visual one-zero-one-five power supply. We have found that the addition of this harness increases the five volts at the game P.C.B. enough to eliminate the problems we had been experiencing with some of the two and three layer game P.C.B.s. If you have questions or need assistance please call.

POWER SUPPLY COMPLETE

ASSEMBLY

