


ADJUSTMENT MDS(MGS)

POINTS AND METHODS OF ADJUSTMENT

MDS-CPU PCB

Game Option Switch Settings

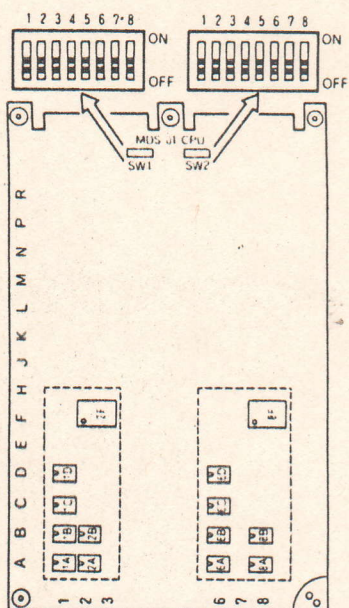

CAUTION: Make sure the Software ROMs and Custom ICs are inserted properly.

SW1:MAIN (Left side for two monitor game--Not used for one monitor game)

SW2:SUB (Right side for two monitor game--Also used for one monitor game)

NOTE: All Software ROMs and Custom ICs must be inserted in both portions on the P.C. Board as shown above.

"VS.DUCK HUNT" can be interchanged between left and right side.

MDS FOR VS.DUCK HUNT

		SW1(SW2)							
		1	2	3	4	5	6	7	8
Coin/Credit	1/1	OFF	OFF	OFF					
	1/2	OFF	OFF	ON					
	1/3	OFF	ON	OFF					
	2/1	OFF	ON	ON					
	3/1	ON	OFF	OFF					
	4/1	ON	OFF	ON					
	5/1	ON	ON	OFF					
Free Play		ON	ON	ON					
Difficulty	Easy	1			OFF	OFF			
		2			ON	OFF			
		3			OFF	ON			
	Hard	4			ON	ON			
Number of Miss Per Game	3						OFF		
	5						ON		
Bonus Miss Awarded At 30,000							OFF	OFF	
	50,000						ON	OFF	
	80,000						OFF	ON	
	100,000						ON	ON	

Nintendo®